MULTI-FUNCTION CHARGER

12V10A/24V5A 7 - Stage Automatic Smart Battery Charger For Lead-Acid... (AGM, GEL,SLA, WET, DEEPCYCLE... BATTERIES) TK-600 For Lead-Acid...



USER MANUAL THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual and follow the instructions carefully before using.

WARNING :

- The TK-600 charger is designed for 12V and 24V Lead-Acid, batteries with capacity from 6AH 180AH(12V), 6AH 90Ah(24V).
- Check battery manufacturer specifications before using.
 Explosive gases may emitting from battery during charging. Provide
- ventilation to prevent flames and sparks.
- Do not expose charger to the sun, or under high temperature environment. Battery acid is corrosive. Rinse immediately with water if acid comes into
- contact with skin or eyes. Do not charge a frozen or damaged
- battery. . Do not charge non-rechargeable

batteries.

- Do not place the charger on the battery while charging.
 Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause
- explosion.

 When working with a lead-acid battery, remove personal metal items such as
- rings, bracelets, necklaces, watch... Do not smoke or allow a spark or flame while charging.
- In order to reduce risk of electric shock, unplug charger from AC outlet before doing any maintenance or cleaning.
- Not for use by children or by anyone who is unable to follow instructions of this manual, unless they are supervised by an adult to ensure the proper use of charger.

MAINFEATURES:

- High efficiency (>85%).
- AGM,Car, Motorcycle , Battery type can selectable
- The 7-stage microprocessor controlled charging process provides the best possible application and enables efficient battery
- charging. Charging voltage adapts to temperature, that can prevent over- or under-
- charging of battery. Capable of recharging severely discharged or heavily sulfated battery.
- Reverse polarity protection, short circuit protection, over-charge protections, parks free contact.
- LCD display: voltage, current, temperature etc. Ease of use. Clear charging status display.
- Full microprocessor controlled.
- Do not over-charge your battery even it is kept connecting in any mode.



LCD DISPLAY:	
110° (())	Charger Inside Temperature
20×	Charge Voltage
	Charge Current
Rep.	Repair Mode
	Standby
F <u>101</u>	Battery Full
d£5	Desulphation Mode Only for AGM and Car mode
285	Test Mode An automatic battery test is conducted immediately after the absorption stage, it monitors the voltage for 10 minutes to determine if the battery is full or not
	Low Voltage Battery voltage is too low or battery can't save the power

End	End of Repair Function
Win.	Winter Mode When the temperature is below +10'C, Raise the charge voltage Only for Car mode
Sum. -`∳-	Summer Mode When the temperature is above +28'C, Reduce the charge voltage Only for Car mode
85.0	Wrong polarity, please change the connection of the clamps
Flt.	Defect battery, please let the battery be checked by a mechanic and if necessary change the battery
	Bad connection, please check the connection between the charger and the battery
12V 24V	12V Battery or 24V Battery
100% 80% 60% 40% 20%	Battery Capacity

7-STAGECHARGINGPROCESS



CHARGERMODES:

The TK-600 has seven (9) modes: 12V AGM, 24V AGM, 12V Car, 24V Car, 12V Motorcycle, 24V Motorcycle, REPAIR. It is important to understand the differences and purpose of each charge mode. Do not operate the charger until you confirm the appropriate charge mode for your battery. Below is a brief description:

AGM	AGM Batteries Mode For AGM Batteries
CAR	CAR Batteries Mode For GEL, SLA, WET, DEEP CYCLE, EFB, Calcium Batteries
Стр. Мото	Motorcycle Batteries Mode For Motorcycle Batteries
REPAIR	Repair Mode (16 hours) An advanced battery recovery mode for repairing and storing, old, idle, damaged, stratified or sulfated. Not all batteries can be recovered, only can use on Motorcycle and Car batteries
MODE	Charge mode select button Be sure to select the mode before connecting the battery, otherwise the mode button will be locked
00.0	LED indication for charging stage

BEGINCHARGING:

1.) Verify the voltage and chemistry of the battery.

2.) Confirm that you have connected the AC power plug is plugged into an electrical outlet.

Press the mode button to toggle to the appropriate charge mode.
 Confirm that you have connected the battery clamps or eyelet terminal

connectors properly 5.) The mode LED will illuminate the selected charge mode and the Charge Icon will illuminate (depending on the health of the battery) indicating the charging process has started. 6.) The charger can now be left connected to the battery at all times to provide maintenance charging.

Auto-Memory: The charger has built in auto-memory and will return to the last charge mode when connected.

TECHNICALSPECIFICATIONS:

Model	ТК-600
Туре	Smart & Automatic
AC Input	100 - 240V 50/60Hz
Output Voltage	12V / 24V Auto
Output Current	12V 10A & 24V 5A
Output Volt under No Load	29.6V
Minimum Start Volt	>7.0V
Input Power With Load	Max. 140W
Input Power under No Load	3W
Cooling	Fan
Size (L*W*H)	170*100*65mm
Weight	605g
Approval	CE / FCC / RoHS